
POS Sales Station Guide to peripheral connections

to your Computer

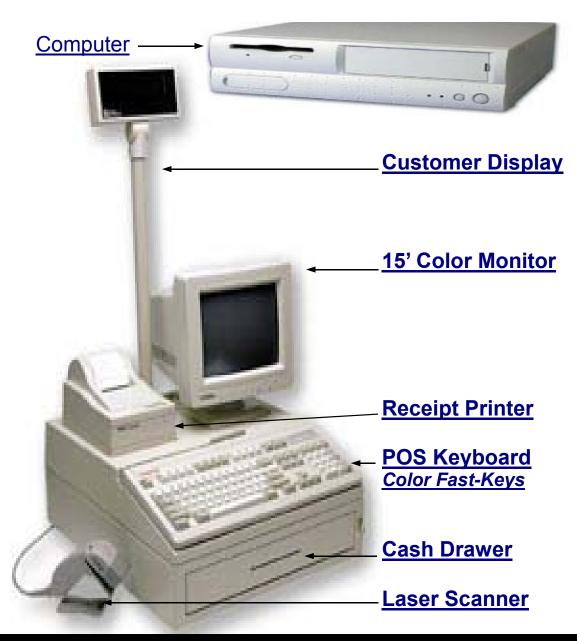

POS Sales Station

Customer Display Pole



POS Sales Station Color Monitors

Information on A-Open Monitors LCD-Flat & CRT Regular



Female power cable end connects from Monitor to Power Source

POS Sales Station Receipt & Report Printers

Learn More about Epson Printers



Epson Receipt Printers T-88 Thermal



Epson Receipt Printers U200 Dot Matrix



Report & Label Printer Laser prints superior barcodes vs Ink-Jet type



Receipt Printers

Printer Cable centronix end clips on to rear of printer. The male 32-pin end connects to PC's female parallel port. A black 3-pin power cable is part of larger power supply that eventually plugs into power source. A telephone-type wire with a male end connects to female interface at rear of printer. The telephone-type cable connects to Cash Drawer.

Report Printers

Can use PC parallel port.
When parallel port is taken the alternative is connecting to PC with a USB cable

POS Sales Station POS Smart Keyboard



POS Keyboard


Unitech Keyboard connects either directly to PC or to a Keyboard wedge Scanner. 24 Keys come Pre-Programmed for fast, Effortless, POS Operation!

POS Sales Station Laser Scanner



POS Sales Station POS Computer

Learn More about A-Open Computers

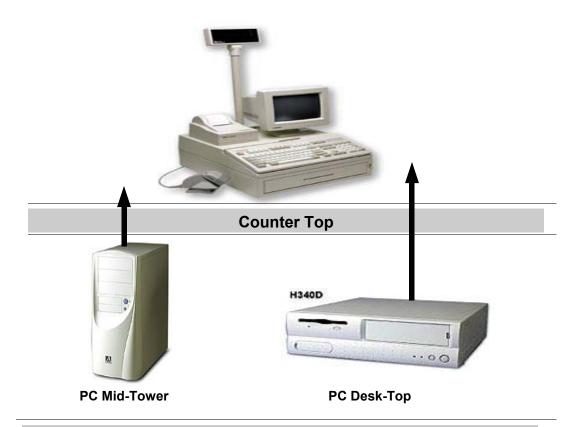


Counter Shelf

Plan appropriate place for PC. It should be placed on a shelf directly below your POS Station. To hide all cables going to the PC a 2-1/2 "hole drilled into the counter is recommended. The PC must be placed in an accessible, well vented area near a power source outlet. It is suggested to use a surge protector or better yet.... An Uninterrupted Power Supply (UPS-Battery)

POS Sales Station Cash Drawers

Learn More about MMF Cash Drawers

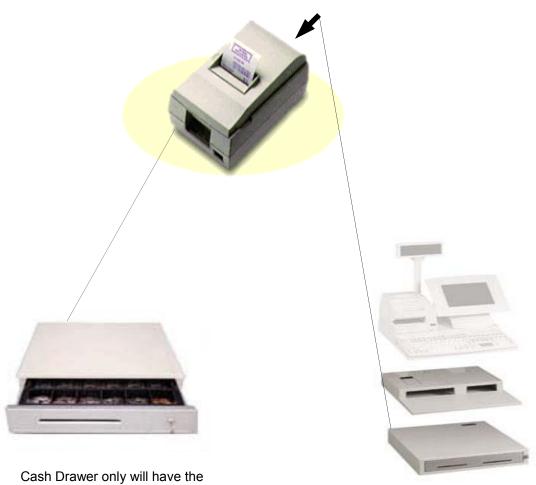

Cash Drawer only will have the Cable hard-wired inside the drawer. Just connect the male telephone-type end to the rear of the printer.

MMF Platforms will have a separate cable. With the 3-pin end connect to Cash drawer. Must remove rear plate to do so. Connect male telephone-type end to the rear of the printer.